


### XZN Sockets



1/2 inch



Sockets Chrome-Vanadium,  
Blades Special High Tensile Steel  
1/2" □ drive (DIN 3120),  
For XZN screws

**Chrome-Plated**  
Blades **Steel Grey**



SPAENAUR No.	HAZET No.	M	L <sub>1</sub> mm	L <sub>2</sub> mm	d mm	Replacement Bits	
						SPAENAUR No.	HAZET No.
991-690	990-5	5	14	52	23	993-351	990-05
991-691	990-6	6	14	52	23	993-352	990-06
991-692	990-8	8	15	53	23	993-353	990-08
991-693	990-10	10	15	53	23	993-354	990-010
991-694	990-12	12	17	55	23	993-355	990-012
991-695	990-14	14	20	58	23	993-356	990-014
991-696	990-16	16	22	60	23	993-357	990-016

### Long Pattern




991-697	990 Lg-8	8	62	100	23	993-358	990 Lg-08
991-698	990 Lg-10	10	62	100	23	993-359	990 Lg-010
991-699	990 Lg-12	12	62	100	23	993-360	990 Lg-012

991-697 = e.g. for CV-joint on VW-Audi

### Extra Long Pattern

e.g. for cylinder head screws  
on engines of various car-types



991-700	990 S Lg-10	10	82	120	23	993-361	990 S Lg-010
991-701	990 S Lg-12	12	102	140	23	993-362	990 S Lg-012

### RIBE CV Sockets



Sockets Chrome-Vanadium,  
Blades Special High Tensile Steel  
1/2" □ drive (DIN 3120),  
For RIBE CV screws

**Chrome-Plated**  
Blades **Steel Grey**




991-702	991-5	5	25	63	23	993-363	991-05
991-703	991-6	6	25	63	23	993-364	991-06
991-704	991-8	8	25	63	23	993-365	991-08
991-705	991-10	10	25	63	23	993-366	991-010
991-706	991-12	12	25	63	23	993-367	991-012
991-707	991-14	14	25	63	23	993-368	991-014
991-708	991-16	16	25	63	23	993-369	991-016

### TORX® Sockets



Sockets Chrome-Vanadium,  
Blades Special High Tensile Steel  
1/2" □ drive (DIN 3120),  
For inside TORX® screws.

**Chrome-Plated**  
Blades **Steel Grey**

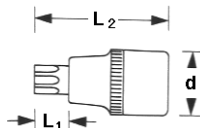

SPAENAUR No.	HAZET No.	mm	L <sub>1</sub> mm	L <sub>2</sub> mm	d mm	Replacement Bit	
						SPAENAUR No.	HAZET No.
991-709	992-T 20	3,86	17	55	23	993-370	992-T020
991-710	992-T 25	4,43	17	55	23	993-371	992-T025
991-711	992-T 27	4,99	17	55	23	993-372	992-T027
991-712	992-T 30	5,52	17	55	23	993-373	992-T030
991-713	992-T 40	6,65	17	55	23	993-374	992-T040
991-714	992-T 45	7,82	17	55	23	993-375	992-T045
991-715	992-T 50	8,83	17	55	23	993-376	992-T050
991-716	992-T 55	11,22	18	56	23	993-377	992-T055
991-717	992-T 60	13,25	18	56	23	993-378	992-T060

### Long Pattern

For cylinder head screws on engines  
of Ford 1.8 L diesel-engines (turbo) Fiesta,  
Escort, Sierra, P 100 since model 8/92

993-804	992 LG-T70	15,54	67	105	23	—	—
---------	------------	-------	----	-----	----	---	---